



# UA844plus SWB

## Antenna Distribution System

The Shure UA844SWB antenna distribution system user guide.  
Version: 4 (2019-H)

---

# Table of Contents

<b>UA844plus SWBAntenna Distribution System</b>	<b>3</b>	<b>Specifications</b>	<b>4</b>
		FRONT AND REAR PANELS	5
<b>General Description</b>	<b>3</b>	Connecting Multiple UA844 Systems	6
Model Variations	3	<b>Certifications</b>	<b>6</b>
<b>Accessories</b>	<b>3</b>	<b>Important Product Information</b>	<b>7</b>
System Components	3	LICENSING INFORMATION	7
Optional Accessories	3		

# UA844plus SWB Antenna Distribution System

## General Description

The Shure Model UA844+ is an antenna distribution system that allows for the expansion of wireless microphone systems by splitting one pair of antennas to multiple receivers. It also amplifies RF signals to compensate for insertion loss that results from splitting signal power to multiple outputs. A single UA844+ system can support up to five wireless receivers. A maximum of five UA844+ systems may be used in a two-tiered configuration.

## Model Variations

### UA844+ Model Variations

<b>UA844+V</b>	174-216 MHz
<b>UA844+SWB</b>	470-960 MHz
<b>UA844+Z16</b>	1240-1260 MHz
<b>UA844+Z17</b>	1492-1525 MHz
<b>UA844+Z18</b>	1785-1805 MHz

**Note:** Some units include a power switch on the front panel to meet regional regulations.

## Accessories

### System Components

- Front-mounting antenna hardware
- Rack-mounting hardware
- External power supply
- (2) 6 ft. BNC cables
- (4) Non-locking DC power cords (QLXD4, SLX4, BLX4R)
- (10) 22 in. BNC cables\*
- (4) Locking DC power cords\*\* (ULXD4)

\*Model UA844+/LC substitutes (2) 22 in. BNC cables.

\*\*Not included with Model UA844+/LC

### Optional Accessories

<b>1/2 Wave Omnidirectional Receiver Antenna for improved wireless signal reception</b>	UA8
---	-----

<b>In-Line RF Amplifier compensates for signal loss over extended cable runs</b>	UA834
<b>UA874 Active Directional Antenna for improved wireless signal reception with greater rejection of unwanted signals</b>	UA874
<b>1/2 Wave Antenna Remote Mount Kit</b>	UA505
<b>Antenna Rack Panel with Cables and BNC Adapters</b>	UA440

**Note:** Be sure to select antennas and accessories that are compatible with the operating frequency range of your wireless system. Contact Shure or your local retailer for help with selecting the right wireless accessories.

## Selecting Antenna Cables

Use 50 ohm low-loss coaxial cable, such as RG-8U. Shure offers pre-terminated antenna cables ranging from 6 to 100 feet.

**NOTE:** When ordering cables from Shure, select the low-loss "Z" models (available for longer cables) when using frequency bands above 1000 MHz.

## Specifications

### Power Requirements

14 to 18 V DC

### DC Output

14 to 18 V DC (x4)

### Output Current

*Combined total from all DC outputs*

2.5 A, maximum

### Operating Temperature Range

-18°C (0°F) to 63°C (145°F)

### Dimensions

45 x 483 x 172 mm (H x W x D)

### Net Weight

1.62 kg (3.6 lbs)

### Connector Type

BNC

### RF Frequency Range

*model dependent*

174 to 1805 MHz

### Bias Voltage

15 V DC (150 mA, maximum) (x2)

**Impedance**50  $\Omega$ **RF Frequency Range***model dependent*

174 to 1805 MHz

**Output Intercept Point**

21 dBm, typical

**Connector Type**

BNC

**Impedance**50  $\Omega$ **Output Connector Isolation**


30 dB, typical

**Gain***Input to any output port (Unused ports terminated in 50  $\Omega$ )*

-1 to +1 dB


## FRONT AND REAR PANELS

- ① Antenna A Connector
- ② Power Indicator
- ③ Power Switch(country dependent)
- ④ Antenna B Connector
- ⑤ 15 V dc (2.54 A) power input
- ⑥ Power Output for receivers. Do not connect to additional distribution systems
- ⑦ RF Input Antenna B
- ⑧ Cascade (2)
- ⑨ RF Output B
- ⑩ RF Output A
- ⑪ RF Input Antenna A

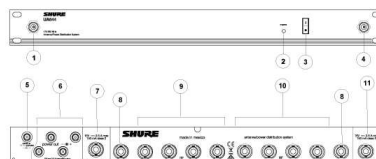

## INSTALLATION

### CABLE CONNECTIONS (ONE UA844)

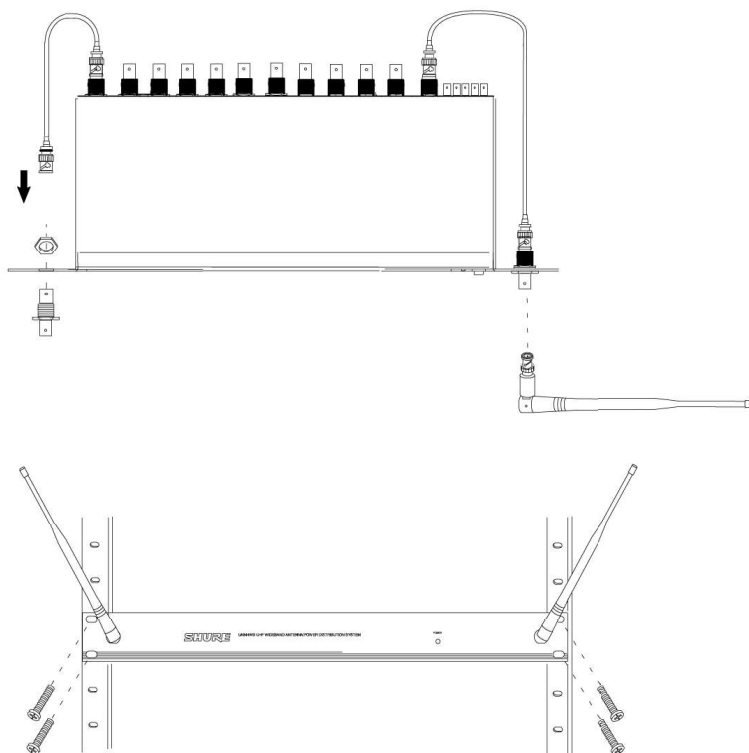

## Connecting Multiple UA844 Systems

- ① Connect additional systems to the A/B ports of the top level UA844.
- ② Connect additional systems on the second level to the A and B antenna inputs.
- ③ Connect each receiver (RX) to the A/B output port pairs on the UA844.

Rear panel connections for each level of RF and power distribution

## Certifications

The CE Declaration of Conformity can be obtained from Shure Incorporated or any of its European representatives. For contact information please visit [www.shure.com](http://www.shure.com)

The CE Declaration of Conformity can be obtained from: [www.shure.com/europe/compliance](http://www.shure.com/europe/compliance)

Authorized European representative:

Shure Europe GmbH

Headquarters Europe, Middle East & Africa

Department: EMEA Approval

Jakob-Dieffenbacher-Str. 12

75031 Eppingen, Germany

Phone: +49-7262-92 49 0

---

Fax: +49-7262-92 49 11 4

Email: info@shure.de

---

## Important Product Information

### LICENSING INFORMATION

Licensing: A ministerial license to operate this equipment may be required in certain areas. Consult your national authority for possible requirements. Changes or modifications not expressly approved by Shure Incorporated could void your authority to operate the equipment. Licensing of Shure wireless microphone equipment is the user's responsibility, and licensability depends on the user's classification and application, and on the selected frequency. Shure strongly urges the user to contact the appropriate telecommunications authority concerning proper licensing, and before choosing and ordering frequencies.

**NOTE:** *This Radio equipment is intended for use in musical professional entertainment and similar applications. This Radio apparatus may be capable of operating on some frequencies not authorized in your region. Please contact your national authority to obtain information on authorized frequencies and RF power levels for wireless microphone products.*